


INSTRUCTIONS FOR INDIVIDUAL COMPONENTS

- **PC** projects the image from the computer mounted in the console. Be sure to log in to the computer using your college Username and Password. A wireless mouse for this computer is located in the Accessories Drawer (located on the bottom right of the cabinet on the right-hand side of the console).
 - **DVD/VCR** projects the image from either VHS tapes or DVDs loaded in the DVD/VCR unit mounted in the console. A remote control for the DVD/VCR unit is located in the Accessories Drawer.
 - **DOC CAM** projects the image from the full-color document camera mounted in console. Power and light switches for the document camera are located on the right side of the device.
 - **LAPTOP** will project the image from a laptop computer that is plugged into the console using the 15-pin VGA cable (for picture) and the mini (headphone jack) cable (for sound) included in the Accessories Drawer. You may also use the Ethernet cable in the Accessories Drawer to get internet access with a laptop that does not have wireless access. The Ethernet cable plugs into the port located on the top of the console surface.
- **A Wireless Mouse** for use with the installed PC is stored in the Accessories Drawer. Features are illustrated below:

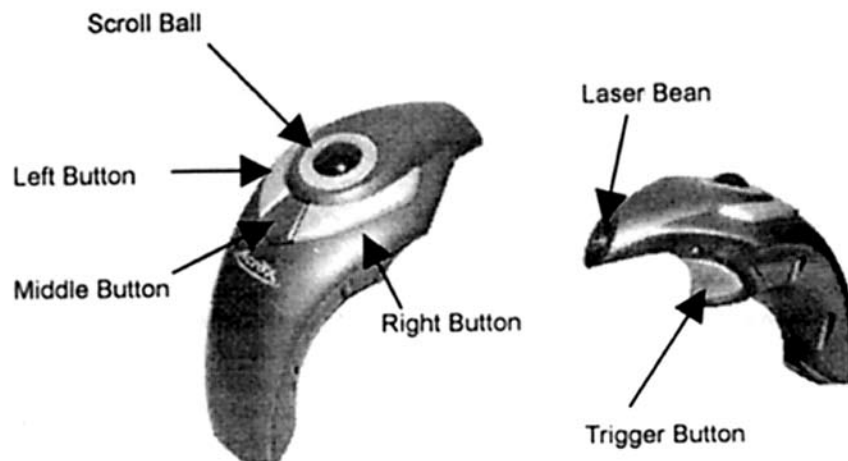

- **To use the wireless microphones**, take one or both of the wireless “clip-on” mic packs from the Accessories Drawer, clip the mic onto your lapel or shirt, switch the power all the way over to the “On” position, and adjust the volume using the “PA Volume” knob on the top right of the console surface.